


GREASEBOSS LUBRICATION MANAGEMENT SYSTEM INSTALLATION GUIDE

MP2 ENDPOINT

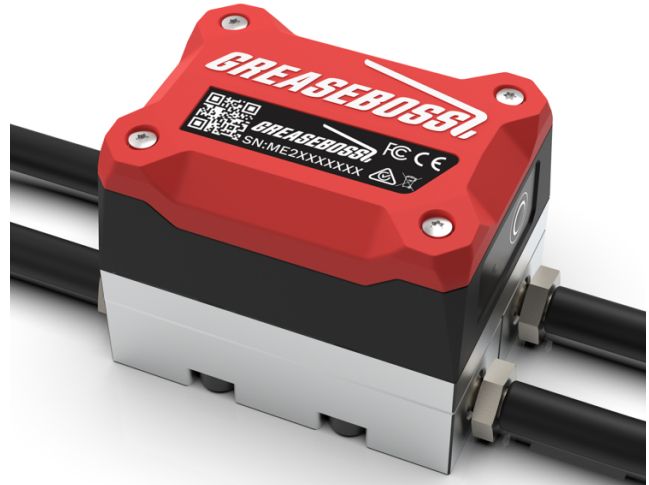

This installation guide provides instructions on how to install the MP2 ENDPOINT in line with an automatic lubrication system.

1: ENSURE ALL DEVICES AND POWER SOURCES TO THE GREASE PUMP AND GREASE SYSTEM ARE FULLY ISOLATED PRIOR TO COMMENCING WORK



(Please take photos of each installation step and provide to GreaseBoss for effective support. Include a photo of the GreaseBoss Endpoint Serial Number.)

2: CHECK ENDPOINT-TO-GATEWAY COMMUNICATION RANGE.

Prior to installation, check that the Endpoint is within range of the GreaseBoss Gateway and perform a test sync.

2.1: Button Push & LED Sequence Guide	Press and HOLD	Release at 1 second	Release at 5 seconds	Release at 7 seconds
	Function LED	Status Check or Power On from deep sleep*	Initiate Sync Process	Reset Pressure Calibration (MP2 endpoint only.)
	  	 LED blinks once if OK	  	
			- Flashes at 1x pulse / second - BT advertising / seeking gateway - Flashes 3 x pulse indicates no connection to gateway - Solid red for 5 seconds indicates failed sync. - Flashes at 1x pulse / second confirms sync in progress - Solid green for 5 seconds confirms successful sync	- Pulsing x 3 - To confirm zero calibration of pressure
*Devices are shipped in deep sleep mode to preserve battery				

2.2: Connect power to the Gateway and allow 3 minutes for it to boot up. Confirm the Endpoint is on by pressing the button for 1 second and confirming a short green LED blink.

2.3: Hold or place the Endpoint in position where it is planned to be installed.

2.4: Press and hold the button on the Endpoint for 5 seconds and release to force a sync with the Gateway. Follow the LED sequence as shown in 2.1 and confirm a solid green LED indicating successful sync.

2.5: Repeat steps 2.3. and 2.4 with each Endpoint to be installed.

Troubleshooting & Improvement Options

If not in range or intermittent, try the following options to improve the connection:

- Check Gateway is on
- Attempt sync 3 times
- Change the Endpoint mounting location
- Change the Gateway location
- Check Endpoint battery level (contact GreaseCloud User or GreaseBoss Support to check)
- Increase Endpoint power and re-try step 2 (contact GreaseBoss Support to enable this)
- Could anything else be interfering with the signal / is an additional gateway required

3: ENDPOINT INSTALLATION PROCESS

Parts & Tools

Included in kit:

- Endpoint MP2
- Note: 1/4" BSPP female thread on Endpoint
- Magnetic mount if selected at time of purchase

Parts & Tools (Cont)	<u>User supplied:</u> • Mounting bolts with washers and nuts • Fittings and hoses as required • Custom mounting bracket if required
3.1: Record the Endpoint Serial Number, Port Number and Grease Point (Serial Number: GBMP#####)	• Note there is a small notch on the side of the Endpoint Lid to indicate Port 1 side.
3.2: Install Endpoint Inline	• Ensure lubrication system is off, isolated and de-pressurised, and the GreaseBoss Gateway is installed. • Identify the grease line that is to be monitored by the Endpoint. • Identify a suitable mounting location for the Endpoint. • Ensure the mounting location is clean and smooth, and clear of dirt. • Disconnect the grease line and install the Endpoint using appropriate fittings and hoses. • Ensure no dirt, debris or contaminants enter the Endpoint or are on the Endpoint Female Thread or Hose/Connector Male Thread. • Check hose and connector integrity. • Secure the grease line on either side of the Endpoint. • Recalibrate Pressure readings to Zero. Press and hold button on Endpoint for 7 seconds and release. Coloured lights will cycle.
3.3: Confirm Endpoint Connectivity	• Ensure the GreaseBoss Gateway is powered on, and automated lubrication is still isolated. • Hold Endpoint button down for 5 seconds and release. • Observe light behaviour pattern - solid green light following flashing lights indicates sync success. (Check other behaviour against the attached image). • Wait two minutes to retry if results are uncertain.

MOUNTING HOLE DIMENSIONS

